

# ***DCA-8000 Controlled Charger***



## ***Users Guide***

*This page intentionally left blank.*

# Contents

<b>General Safety Precautions</b>	<b>6</b>
General Safety Precautions	6
Personal Precautions	7
Preparing To Charge The Battery	7
Grounding & Power Cord Connections	8
Charger Location	9
DC Connection Precautions	10
Installing The Battery	10
Removing the Battery	10
Maintenance & Storage	11
Locking Power Cord	11
Wireless Safety	11
<b>Product Specifications</b>	<b>12</b>
<b>1 – Introduction &amp; Overview</b>	<b>13</b>
Safety Reminder	13
Safety Precautions	13
Manual Conventions	13
Front View	14
Rear View	14
Connections	15
Charging Cables	15
Locking Power Cord	15
Scanner Cable	15
Main Menu	16
Additional Screens	16
Main Menu Icons	17
Inspecting the Battery	17
Charging Out-of-Vehicle (Battery Test)	18
Connecting To The Battery	18
Initial Setup	18
<b>2 – In Vehicle Charge</b>	<b>21</b>
Battery Test	21
Battery Test Results	22
System Test	24
System Test Results-Summary	24
<b>3 – Out Of Vehicle Charge</b>	<b>25</b>
Battery Test Results	25
<b>4 – Battery Diagnostics</b>	<b>26</b>
Battery Test	26
Battery Test Results	27
New Battery Install	27
System Test	28
System Test Results-Summary	28
<b>5 – Jump Start</b>	<b>29</b>
Jump Start Summary	30

<b>6 – History</b>	<b>31</b>
Tool History	31
Totals By Test Decision	31
Totals By Charge Decision	31
Totals By Test Type	32
Totals By Date And Location	32
Vehicle History	32
Vehicle Select Option	32
User History	33
Totals By Test Decision	33
Totals By Charge Decision	33
Totals By Test Type	33
Totals By Date And Location	33
<b>7 – Messages</b>	<b>34</b>
Accessing Messages	34
Message Types	34
<b>8 – Manual Charge</b>	<b>35</b>
<b>9 – Settings</b>	<b>36</b>
WiFi	36
Adding A Network	36
Deleting A Network	36
Printer Settings	37
Adding A WiFi Printer (Admin Only)	37
Adding A Bluetooth Printer (Admin Only)	37
Deleting A Printer (Admin Only)	37
Email	38
Add Address (Admin Only)	38
Edit Address (Admin Only)	38
Deleting An Address (Admin Only)	38
Server Settings	38
User Settings (Admin Only)	39
User Management (Admin Only)	39
Language Settings	39
System Language	39
Test Result Language	39
Email Language	39
Print Language	39
Display Settings	40
Brightness	40
Auto Brightness	40
Sleep Time	40
Dim Time	40
BMIS Login (Admin Only)	40
Shop Information (Admin Only)	41
Shop Information	41
Test Settings	42
Device List	43
Add CVG Device	43
Version Information	44
Factory Preset	44
Legal Information	44
Check for Updates	44

---


<b>10 – Reflash</b>	<b>45</b>
<hr/>	
<b>11 – After New Battery Install</b>	<b>46</b>
<hr/>	
Battery Test	46
Battery Test Results	47
Reset Electronics	47
System Test Results-Summary	47
<b>Appendix A: Recommended Scanning Procedure</b>	<b>48</b>
<hr/>	
VIN Scanning	48
Scanning Tips	48
<b>Appendix B: Battery Information Definitions</b>	<b>49</b>
<hr/>	
<b>Appendix C: Test Results Decision Tables</b>	<b>50</b>
<hr/>	
Battery Test Results	50
Starter Test Results	51
Alternator Test Results	52
Diode Test Results	52

# General Safety Precautions

**IMPORTANT SAFETY INSTRUCTIONS.** WORKING IN THE VICINITY OF A LEAD-ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS OF THE UTMOST IMPORTANCE THAT THESE INSTRUCTIONS ARE FOLLOWED EACH TIME THE CHARGER IS USED.

For safe, efficient, and accurate charging and testing, review the safety and operating instructions in this manual before using the analyzer. In addition, follow all manufacturers' instructions and BCI (Battery Council International) safety recommendations.

## 1 General Safety Precautions

<b>⚠ CAUTION</b>	
	<p><b>Charging a non-rechargeable battery may cause the battery to burst.</b></p> <p>To reduce the risk of injury, only charge rechargeable lead-acid type batteries including maintenance-free, low-maintenance, or deep-cycle batteries.</p>

<b>⚠ WARNING</b>
<p><b>Risk of explosive gases.</b></p> <p>Batteries generate explosive gases during normal operation, and when discharged or charged.</p>

- 1.1 To reduce risk of battery explosion, follow these safety instructions and those published by the battery manufacturer and the manufacturer of any equipment you intend to use in the vicinity of a battery. Review cautionary marking on these products and on the engine, and on the vehicle or equipment containing the battery.
  - If you are uncertain as to the type of battery you are attempting to charge, or the correct procedure for checking the battery's state of charge, contact the seller or battery manufacturer.
- 1.2 Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
- 1.3 To reduce risk of damage to the electric plug and cord, pull by the plug rather than by the cord when disconnecting the charger.
- 1.4 Position the AC and DC leads to avoid tripping over them and to prevent damage from moving engine parts; protect from heat, oil, and sharp edges.
- 1.5 Do not operate the charger if it has received a sharp blow, been dropped or otherwise damaged in any way; take it to a qualified service center.
- 1.6 Do not disassemble charger; take it to a qualified service center when repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- 1.7 To reduce risk of electric shock, unplug the charger from the AC outlet before attempting any maintenance or cleaning. Turning off the controls will not reduce this risk.
- 1.8 Connect and disconnect the battery leads only when the AC supply cord is disconnected.
- 1.9 Do not overcharge the battery.
- 1.10 Charge the battery in a dry, well-ventilated area.
- 1.11 Never place articles on or around the charger, or locate the charger in a way that will restrict the flow of cooling air through the cabinet.
- 1.12 An extension cord should not be used unless absolutely necessary. (See paragraph 4.2)
- 1.13 Have a damaged cord or plug replaced immediately.
- 1.14 Do not expose the charger to rain or snow.

## 2 Personal Precautions

- 2.1 This charger is not to be used by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 2.2 Children should be supervised to ensure they do not play with the appliance
- 2.3 Always have someone within range of your voice, or close enough to come to your aid, when working around lead acid batteries.
- 2.4 Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing or eyes.
- 2.5 Wear complete eye protection, clothing protection, and wear rubber soled shoes. Place damp cloth over battery to protect against acid spray. When ground is very wet or covered with snow, wear rubber boots. Avoid touching eyes while working near battery.
- 2.6 If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters the eye, immediately flush with cold running water for at least 10 minutes, and seek medical attention.
- 2.7 NEVER smoke or allow a spark or flame in vicinity of a battery or engine.
- 2.8 Be extra cautious to reduce risk of dropping a metal tool onto the battery. It might spark or short circuit the battery or other electrical part that may cause an explosion.
- 2.9 Before working with a lead-acid battery, remove personal metal items such as rings, bracelets, necklaces, watches, etc. A lead-acid battery can produce a short circuit current high enough to weld such items causing a severe burn.

### CAUTION

To avoid electrical shock or burn, never alter the charger's original AC cord and plug. Disconnect plug from outlet when charger is idle.

The charger is not intended to supply power to a low-voltage electrical system other than applications using rechargeable, lead-acid type batteries. Do not use the battery charger for charging dry-cell batteries commonly used with home appliances. These batteries may burst and cause personal injury and property damage.

- 2.10 **NEVER** charge a frozen battery; thaw it out first.

## 3 Preparing To Charge The Battery


- 3.1 If it is necessary to remove the battery from vehicle to charge it, always remove the grounded terminal from the battery first. Make sure all accessories in the vehicle are off, so as not to cause an arc.
- 3.2 Be sure the area around the battery is well ventilated while the battery is being charged. Gas can be forcefully blown away by using a piece of cardboard or other non-metallic material as a fan.
- 3.3 Clean the battery terminals. Be careful to keep corrosion from coming into contact with your eyes.
- 3.4 Add distilled water in each cell until the battery acid reaches the level specified by the manufacturer. This helps purge excessive gas from the cells. Do not overfill. For a battery without caps, carefully follow the manufacturer's recharging instructions
- 3.5 Study all battery manufacturer's specific precautions such as removing or not removing cell caps while charging and recommended rates of charge.
- 3.6 Determine the voltage of the battery by referring to the car owner's manual and make sure that the output voltage selector switch is set at the correct voltage. If the charger has an adjustable


charge rate, charge the battery initially at lowest rate. If the charger has only one voltage, verify that the battery voltage matches the voltage of charger.

For a charger not having an output voltage selector switch, determine the voltage of the battery by referring to car owner's manual and make sure it matches the output rating of the battery charger.


#### 4 Grounding & Power Cord Connections


4.1 The charger must be grounded to reduce risk of electric shock. The charger is equipped with an electric cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.


<b>⚠ DANGER</b>	
	<p><b>Hazardous voltage.</b> <b>An improper connection can result in electric shock.</b></p> <p>To avoid electrical shock or burn, never alter the charger's original AC cord and plug. Disconnect plug from outlet when charger is idle.</p>

	<p><b>IMPORTANT:</b> If the plug does not fit the outlet, have a proper outlet installed by a qualified electrician.</p>
---	--

4.2 This battery charger is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in Figure A. A temporary adapter, which looks like the adapter illustrated in Figures B and C, may be used to connect this plug to a two-pole receptacle as shown in Figure B, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician.

<b>⚠ DANGER</b>	
	<p><b>Hazardous voltage.</b> <b>An improper connection can result in electric shock.</b></p> <p>Before using an adapter be certain the center screw of the outlet plate is grounded. The rigid ear or lug extending from the adapter must be connected to a properly grounded outlet. Make certain it is grounded. If necessary, replace the original screw that secures the adapter ear or lug to the cover plate and make the ground connection to the grounded outlet.</p>

	<p><b>IMPORTANT:</b> Use of an adapter is not allowed in Canada. If a grounding-type receptacle is not available, do not use this appliance until the proper outlet is installed by a qualified electrician.</p>
---	--

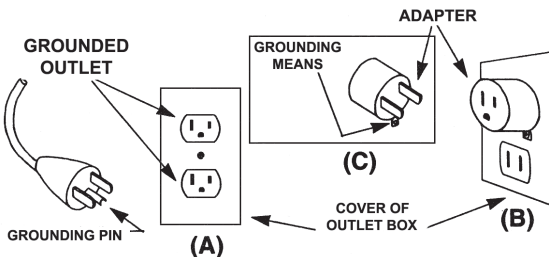



- 4.3 An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure:
- that the pins on plugs of the extension cord are the same number, size, and shape as those of the plug on the charger;
  - that the extension cord is properly wired and in good electrical condition;
  - that the wire size is large enough for the AC ampere rating of charger as specified in the following table.

Recommended minimum AWG* size for extension cords for battery chargers					
AC input rating Amps		AWG* size of cord			
Equal or greater than:	But less than:	Length of cord, feet (m)			
		25 (7.6)	50 (15.2)	100 (30.5)	150 (45.6)
8	10	18	14	12	10
10	12	16	14	10	8
12	14	16	12	10	8
14	16	16	12	10	8
16	18	14	12	8	8

\*American Wire Gauge

## 5 Charger Location

Not for permanent installation: Modifying this charger for permanent installation in a vehicle or installing this charger in a vehicle for permanent use is not recommended.




This charger is **NOT** designed outside use or for wet location mounting. The charger must always be protected from direct contact with water.

- The charger must be located in an area with sufficient air space to allow unrestricted airflow in and around the charger.
- Locate the charger as far away from the battery as the charger cables permit.
- Never place the charger directly above the battery being charged; gases from the battery will corrode and damage the charger.
- Never allow battery acid to drip on the charger when taking gravity readings or filling a flooded cell battery.
- Operate the charger only in a well-ventilated area that is free of dangerous vapors.
- Store the charger in safe, dry location and maintain it in perfect condition.
- Do not set the battery on top of the charger or where its acid might drip onto the charger.

## 6 DC Connection Precautions

- 6.1 Connect and disconnect the charger clamps only after the charger has been turned off and the AC supply cord is disconnected from the electric outlet.
- 6.2 Never allow the charger clamps to touch each other.
- 6.3 When attaching the charger clamps, be certain to make the best possible mechanical as well as electrical connection. This will tend to prevent the clamps from slipping off the connections, avoid dangerous sparking, and assure safer and more efficient charging. The clamps should be kept clean.

⚠ DANGER	
	<p><b>Hazardous voltage.</b>  <b>Can cause death or serious personal injury.</b></p> <p>Setting the switches to "OFF" does not always disconnect the charger electrical circuit from the AC power cord or the DC charger clamps.</p>

## 7 Installing The Battery

⚠ WARNING
<p><b>Risk of explosive gases.</b></p> <p>A spark near the battery may cause a battery explosion. Follow these steps when the battery is installed in the vehicle to reduce the risk of explosion.</p>

- 7.1 Locate the charger as far away from the battery as the charger cords permit and position the AC and DC cords to avoid stepping on or tripping over them and to prevent damage by moving engine parts.
- 7.2 Turn **OFF** all vehicle loads, including door lights, and correct any defects in the vehicle's electrical system that may have caused low battery.
- 7.3 First connect the **POSITIVE (RED)** clamp from the charger to the **POSITIVE (POS., P, +)** ungrounded post of the battery. Then connect the **NEGATIVE (BLACK)** clamp to the **NEGATIVE (NEG., N,-)** post of the battery. Do not connect the clamp to the carburetor, fuel lines, or sheet-metal body parts.

## 8 Removing the Battery

- 8.1 If it is necessary to remove the battery from the vehicle or equipment, always remove the grounded terminal from the battery first.

⚠ WARNING
<p><b>Risk of explosive gases.</b></p> <p>A spark near the battery may cause a battery explosion. Follow these steps when the battery is installed in the vehicle to reduce the risk of explosion.</p>

⚠ WARNING
<p><b>Risk of explosive gases.</b></p> <p>Make sure all vehicle loads are <b>OFF</b> to prevent a possible arc.</p>

- 8.2 Check the polarity of battery posts.
- 8.3 Connect the **POSITIVE (RED)** charger clamp to the **POSITIVE (POS., P, +)** post of battery.
- 8.4 Position yourself and the free end of cable as far away from the battery as possible—do not face the battery when making the final connection—then connect the **NEGATIVE (BLACK)** charger clamp to the free end of the cable.

- 8.5 When disconnecting the charger, always do so in the reverse sequence of the connecting procedure; break the first connection while staying as far away from the battery as practical.


## 9 Maintenance & Storage

Follow these guidelines to protect the charger and test cables from damage and premature wear:

- 9.1 The grease, dirt, and sulfation that build up on battery terminals are highly corrosive and can damage the clamps over time. Before connecting the clamps, ensure accurate test readings and protect the clamps by cleaning the battery case and terminals using a wire brush and a mixture of water and baking soda.
- 9.2 Periodically clean the clamps using a mixture of baking soda and water, or a mild hand-soap, and a small bristle brush.
- 9.3 Clean the battery terminals. If stud adapters are required, fasten them with the proper tool. Do not use the battery clamps to tighten adapters.
- 9.4 Never remove the clamps from a battery to abort an active charging session. Always press the red **STOP** button before removing the clamps.
- 9.5 Do not leave the clamps laying in battery acid.

### Locking Power Cord

Always pull back on the red tab on the side of the power cord connector to release/remove it from the charger's power socket.

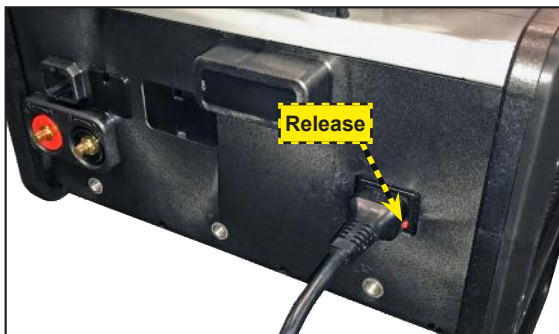

### Storage

Always store the charger in safe, dry location and maintain it in perfect condition.

## 10 Wireless Safety



The operation of this equipment is subject to the following two conditions.

1. This equipment or device may not cause harmful interference.
2. This equipment or device must accept any interference. Including interference that may cause undesired operation.

**SAVE THESE INSTRUCTIONS**

# Product Specifications

## Power

Input: 100 – 240 , 50/60 Hz; 12A max.  
 Output: 12 V , 70A

### Charge Cables

- 3m
- 5m

## Power Cord

Accepts C19 locking connector for region-specific power cables:

- United States: EMA 5-15 termination, rated at 15A/125V UL CSA

## Applications

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• Automotive</li> <li>• Heavy-Duty</li> <li>• Power Sports</li> </ul> | <ul style="list-style-type: none"> <li>• Marine</li> <li>• Group 31</li> <li>• Commercial 4D/8D</li> </ul> |
|--|--|


## Battery Chemistries

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• Lead acid</li> <li>• AGM</li> </ul> | <ul style="list-style-type: none"> <li>• EFB</li> <li>• Lithium ion</li> </ul> |
|--|--|

## Rating System

- |  |   |   |
|--|---|---|
| <ul style="list-style-type: none"> <li>• CCA</li> <li>• CA</li> <li>• MCA</li> </ul> | <ul style="list-style-type: none"> <li>• JIS</li> <li>• DIN</li> <li>• SAE</li> </ul> | <ul style="list-style-type: none"> <li>• IEC</li> <li>• EN</li> </ul> |
|--|---|---|

## Operating Parameters

- Input Voltage: 100 – 240 , 50/60 Hz; 12A max.
- Output: 15VDC; 70A maximum

## Humidity

- 15% to 85% R.H., non-condensing

## Dimensions

(without handle or base)

- Weight: 34 lbs (15.45 kg)

## Temperature

- Operating temperature range: 0°C to +60°C (32°F to +140°F)
- Storage temperature range: -10°C to + 85°C (14°F to 185°F)

## Certifications

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• CUL</li> <li>• ETL</li> <li>• FCC</li> </ul> | <ul style="list-style-type: none"> <li>• RoHS</li> <li>• VL</li> </ul> |
|---|--|

## Connectivity

### Wi-Fi

- 802.11 b/g/n 2.4GHz
- Security – WEP, WP, WPA-2 Enterprise

### Bluetooth

- 2.0
- USB 2.0 connection

CAN bus interface

## Protection Features

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>• Reverse polarity</li> <li>• Non-12V battery connection</li> <li>• Clamp connection</li> </ul> | <ul style="list-style-type: none"> <li>• Battery voltage too low (&lt; 5.5 V)</li> <li>• Clamp high temperature detection</li> </ul> |
|--|--|

## BMIS-Enabled

- Remote “over the air” software updates
- Remote diagnostics
- Enterprise asset management
- Reporting and analytic tools
- Communication with next generation Midtronics platforms and tools

## User Interface

- Advanced navigation and charge applications
- Remote notifications (Wi-Fi- or Bluetooth-enabled)
- Intuitive charge cycle feedback
- 5” Touch Screen




# 1 – Introduction & Overview

## Safety Reminder

For safe, efficient, and accurate charging and testing, review the safety and operating instructions in this manual before using the analyzer. In addition, follow all manufacturer instructions and BCI (Battery Council International) safety recommendations.

## Safety Precautions





Inspect the battery for damages and check the electrolyte level. If the electrolyte level is too low, replenish it and fully charge the battery. Always use the necessary safety precautions when working with batteries to prevent severe injury or death. Follow all manufacturers' instructions and BCI (Battery Council International) safety recommendations, which include the following precautions:

 <b>DANGER</b>		 <b>CAUTION</b>
	<p><b>Risk of explosive gases. Never smoke or allow a spark or flame in the vicinity of a battery.</b></p> <p>Batteries can produce a highly explosive mix of hydrogen gas and oxygen, even when the battery is not in operation. Always work in a well-ventilated area.</p>	<p><b>Wash hands after handling.</b></p> <p>REQUIRED BY CALIFORNIA PROP. 65: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.</p>


- ✓ Battery acid is highly corrosive. If acid enters your eyes, immediately flush them thoroughly with cold running water for at least 15 minutes and seek medical attention. If battery acid gets on your skin or clothing, wash immediately with a mixture of water and baking soda.
- ✓ Always wear proper safety glasses or face shield when working with or around batteries.
- ✓ Keep hair, hands, and clothing as well as the analyzer cords and cables away from moving engine parts.
- ✓ Remove any jewelry or watches before you start servicing the battery.
- ✓ Use caution when working with metallic tools to prevent sparks or short circuits.
- ✓ Never lean over a battery when testing, charging, or jump starting.
- ✓ Never charge a frozen battery. Gases may form, cracking the case, and spray out battery acid.

## Manual Conventions

This manual uses these symbols and typographical conventions:

Symbol	Description
	The safety symbol indicates instructions for avoiding hazardous conditions and personal injury.
	The safety symbol with the words <b>CAUTION</b> , <b>WARNING</b> , or <b>DANGER</b> indicates instructions for avoiding hazardous conditions and personal injury.
	The wrench symbol indicates procedural notes and helpful information.
	These symbols indicate which arrow keys on the keypad to press for a given function.
<b>Bold Letters</b>	The text for screen options are in <b>Bold</b> letters.

Front View

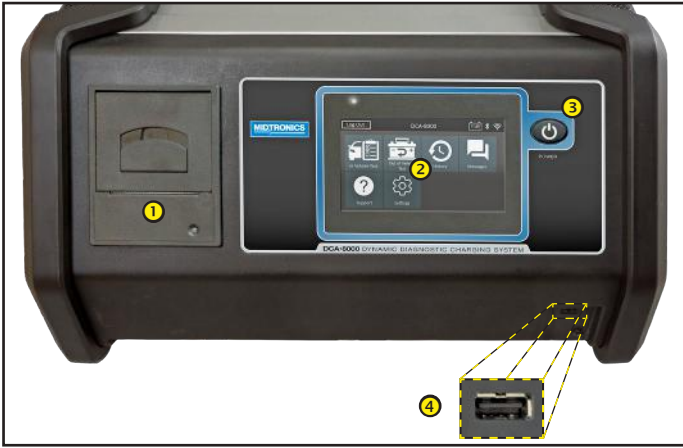


1 Thermal Printer

3 Charger Power Button

2 Touch Screen Display

4 USB Port

Rear View

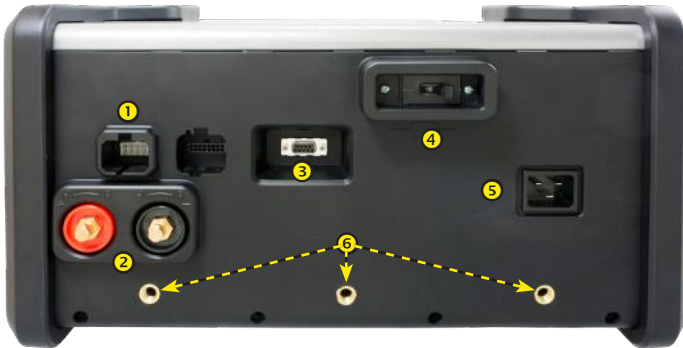

1 Communication Cable Connection

4 Circuit Breaker Reset

2 Charge Cable Connections

5 Power Cord Socket

3 VIN Scanner Connection (DB-9)

6 For Charger Cart Mounting Bolts

## Connections

### Charging Cables

1. Insert the communication cable.
2. Insert and rotate the charge cable quick connectors clockwise 180° to lock them onto the Quick Connector Locking Post on the charger.



3. The connection process is complete when all three cables are connected to the charger.

### Locking Power Cord

Pull back on the red tab on the side of the connector to release/remove the power cord from the charger's power socket.




### Scanner Cable

Use the screws on the connector to secure the cable to the charger.



### Main Menu

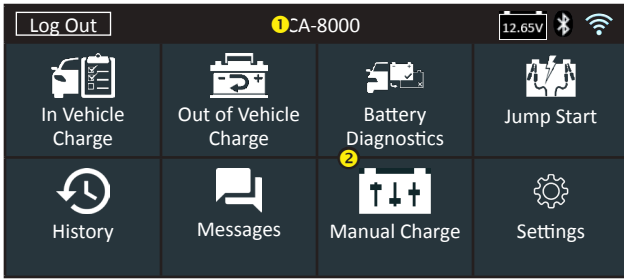


#### 1 Menu Bar

Log Out	Log out current user		Bluetooth connectivity status
12.65V	Measured battery voltage		
	WiFi signal strength		


#### 2 Main Menu Selection Area

### Additional Screens

The dots at the bottom or side of a menu or results screen indicate additional screens are available. Use your finger to swipe horizontally, left, right, up or down across the Controller screen to view all of the results.

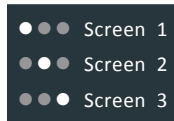



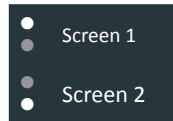








*Swipe Horizontally*



*Swipe Vertically*



## Main Menu Icons

Icon	Description	Icon	Description
 In Vehicle Charge	Automates battery testing for quickly testing vehicles using the fewest steps.	 Manual Charge	Provides a timed charge that ranges from 5 to 120 minutes or a continuous charge that ends when <b>STOP</b> is pressed.
 Out of Vehicle Charge	For testing out-of-vehicle customer batteries for possible return.	 Settings	Setup/adjust: WiFi, printer setup, email settings, user information, default language, display/sound settings, BMIS, shop info, connected devices, tool software version information.
 Battery Diagnostics	Performs full battery diagnostics but will not charge the battery.	 Refresh	Evaluates and maintains battery voltage at 13.5 volts to provide uninterrupted reprogramming and retention of a vehicle's system settings.
 Jump Start	Makes high output current available to boost charge an in-vehicle battery and assist in starting the engine.	 After New Battery Install	Access the analyzer Self-Test and a digitized version of the Instruction Manual that was shipped with the analyzer.
 History	Access archived test histories or search test history by VIN or by technician.	 Support	Access the analyzer Self-Test and a digitized version of the Instruction Manual that was shipped with the analyzer.
 Messages	Displays alerts and notifications for upcoming tests and activities including scheduled tests, tool software updates and maintenance opportunities.		

**Inspecting the Battery**

Before starting the test visually inspect the battery for:

- Cracked, buckled, or leaking case. If you see any of these defects, replace the battery.
- Corroded, loose, or damaged cables and connections. Repair or replace them as needed.
- Corrosion on the battery terminals, and dirt or acid on the case top. Clean the case and terminals using a wire brush and a mixture of water and baking soda.
- Low electrolyte level. If the electrolyte level is low, add distilled water to fill up to ½ above the top of the plates and fully charge the battery. Do not overfill.
- Corroded or loose battery tray and hold-down fixture. Tighten or replace as needed.

## Charging Out-of-Vehicle (Battery Test)

The preferred battery charging location is in the vehicle. However, if you plan to charge out of the vehicle:

- Always disconnect the negative cable from the battery first and reconnect it last.
- Always use a carry tool or strap to lift and transport the battery.

### CAUTION

#### Do not test at the battery's steel bolts.

Failure to properly install lead terminal adapters, or using adapters that are dirty or worn, may cause false test results. Always use lead terminal adapters provided with the charger when testing side-post or Group 31 batteries



**IMPORTANT:** To avoid damage, never use a wrench to tighten the adapters.

## Connecting To The Battery

Connect the charging clamps to the battery in accordance with all precautions and safety instructions. **Do not connect either clamp to the vehicle's chassis.**

Connect the **Red** clamp to the positive (+) terminal and the **Black** clamp to the negative (-) terminal. An alert is displayed if the clamps are reversed on the battery terminals.

To make sure both sides of the clamps are gripping the terminals, rock the each clamp back and forth. A poor connection will prevent testing, and the analyzer will display the message CHECK CONNECTION. If the message reappears after you have correctly reconnected the clamps, clean the terminals and reconnect.

## Initial Setup

1. Upon initial power-up, the Language Settings screen is displayed. Tap **Next** to continue.

<b>System Language</b>	Select the Controller default language displayed on the screen.
<b>Test Result Language</b>	Select the Controller default language for all displayed tests and test results.
<b>Email Language</b>	Select the default standard language for the analyzer to use for all tests and results sent via email.
<b>Print Language</b>	Select the default standard language for the analyzer to use for all tests and results printed using a networked printer.

2. A Consent to collect data screen is displayed. Tap the Consent check box and then tap **Next** to continue.
3. Using the displayed keypad template, enter the new user name and password.
4. Tap **Next** to continue.



**IMPORTANT:** By default, the first user created is assigned Administrator rights. Tap Add User to add additional users. See Chapter 9: Settings to change these defaults.

5. The Date/Time Settings are displayed. Tap **Next** to continue after making any adjustments.

<b>Select Time Format:</b>	12-hour or 24-hour format
<b>Select Date Format:</b>	DD/MM/YYYY, MM/DD/YYYY, or YYYY/MM/DD
<b>Select Time Zone:</b>	Time zone offset from Greenwich Mean Time
<b>Set Date:</b>	Set the current date
<b>Set Time:</b>	Set the current time in the selected time zone

6. The Test Settings are displayed. Tap **Next** to continue after making any adjustments.

<b>Battery Rating</b>	Default: CCA (Cold Cranking Amps)
<b>Temperature Units</b>	Select Fahrenheit or Celsius
<b>Decimal Separator</b>	Select decimal point or comma

7. A list of devices connected to the tester is displayed.

To add a device, tap the plus (+) sign and follow the on-screen instructions. To unlink from a device, tap the displayed serial number to select it. Tap the trash can icon (🗑️) to delete it.



**NOTE:** A passkey number is automatically generated once the Bluetooth pairing has been established.

Tap the check box to require an Amp Clamp when performing a System Test.

8. A listing of detected Configured WiFi networks is displayed.

**To select a network:** For initial setup, no networks will be displayed here yet.

**To add a network:** Tap the plus (+) sign, then select from one of the displayed detected networks.

To manually add a network, tap the plus (+) sign again. Follow the on-screen instructions to select the Network SSID, Security, and IP Settings. Tap **Next** when finished.

Use the onscreen keypad to manually enter the Network SSID, security type, and IP settings. If necessary, enter the WiFi network password. Tap **Next** when finished.

A confirmation screen is displayed when the analyzer has successfully connected to the WiFi network.

**To delete a network:** Tap a displayed network to select it. Tap trash can icon (🗑️) to delete it.


9. The BMIS (Battery Management Information System) Account screen is displayed.


Tap **Yes** to connect the analyzer to an existing BMIS account. Enter a BMIS User Name and Password for the analyzer to use when transmitting test data to the BMIS database.

Tap **No** to skip this step.

10. The Email Address Book screen (Admin Only) is displayed.

**To add an email address:** Tap the plus (+) sign, then use the displayed keyboard to add the address.

**To edit an email address:** Tap the pencil  icon, then use the displayed keyboard to edit the address.

**To delete an email address:** Tap a displayed email address to select it. Tap trash can icon () to delete it.


**To use the Default Email Server Settings:** Tap the gear  icon to use the default.

11. The Shop Information screen (Admin Only) is displayed

Use the onscreen keypad to enter the store name, address, and phone number. Tap **Next** to continue.

Store Name	<input type="text" value="Midtronics"/>
Street Address	<input type="text" value="7000 Monroe"/>
Street Address 2	<input type="text"/>
City	<input type="text" value="Willowbrook"/>
State	<input type="text" value="IL"/>
Zipcode	<input type="text" value="60527"/>
Phone #	<input type="text" value="1-630-323-2800"/>

12. The login screen is displayed.

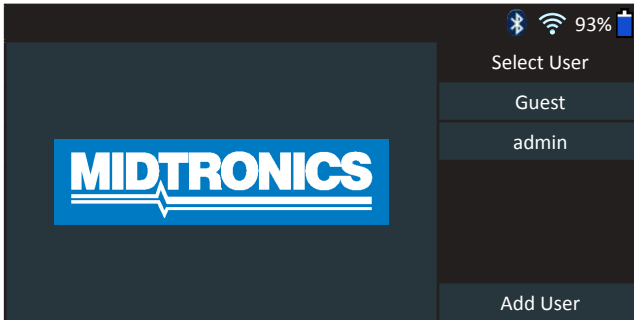

13. Tap a user name to access the Main Menu.

## 2 – In Vehicle Charge



In Vehicle Charge

Use In Vehicle Charge to charge a battery installed and connected in a vehicle using test parameters determined by vehicle VIN or year, make, and model of the vehicle being tested. A System Test using an optional Amp Clamp is also available.



**NOTE:** An In Vehicle Test test will always associate the in-vehicle battery with the VIN of the vehicle in which it is installed.

At any time during the test tap ◀ to return to the previous screen or 🏠 to return to the Main Menu.

### Battery Test

1. Connect the charger clamps to the appropriate battery posts.
2. At the Main Menu tap **In Vehicle Charge**. The Acquire VIN screen is displayed.
3. Use a connected bar code scanner to scan the VIN bar code, usually located on the driver's side door frame. A paired CVG can also be used. The VIN can also be entered manually.

For best results, use the barcode located on the driver's side door frame. The VIN is also displayed behind the windshield on the driver's side dashboard.



**NOTE:** Refer to Appendix A for recommended scanning procedures and VIN scanning help



Windshield



Drivers Door Frame

### CVG Module:




**Manual Entry:** Use the on-screen keypad to manually type the 17-digit VIN and tap **Next**.

1	2	3	4	5	6	7	8	9	0
W	E	R	T	Y	U	P			
A	S	D	F	G	H	J	K	L	
Z	X	C	V	B	N	M			ⓧ
Back									Next


The displayed digit counter will count up the alphanumeric characters as they are entered on the keypad.


- 4. The Edit Battery Information screen displays vehicle and battery information based on the VIN.

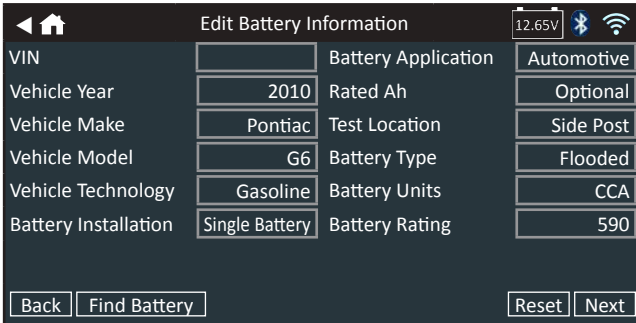

If the displayed information is correct, tap **Next** to begin the Battery Test or **Reset** to reset the parameters to the factory defaults.


- 5. Tap the box across from each displayed parameter and select the correct information from the displayed list.

 **NOTE:** See Appendix B for complete parameter descriptions.

 **NOTE:** Tap **Find Battery** to search for the battery location based on the vehicle year, make, and model based on the VIN or vehicle year, make, and model selected.




The charger performs a series of tests to determine the overall condition of the battery before applying a charge. Those steps include measuring the ambient battery temperature, Cranking Health, Reserve Capacity, Charge Acceptance, and applying a Load Test to the battery.

The test results are then displayed on the charger screen.

 **NOTE:** If the CVG was used to acquire the vehicle information, the Edit Battery Information screen is displayed (See Step 3). Tap **Next** to display the test results..

### Battery Test Results



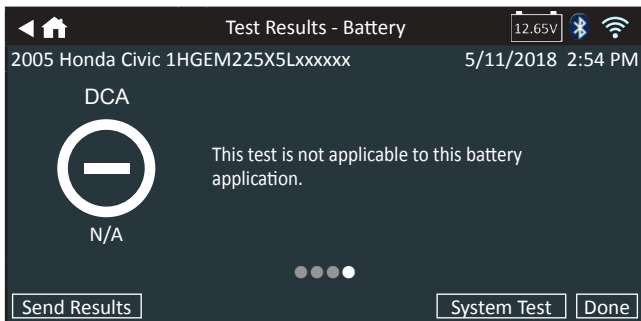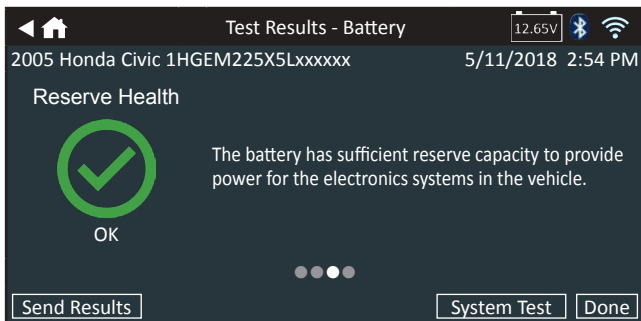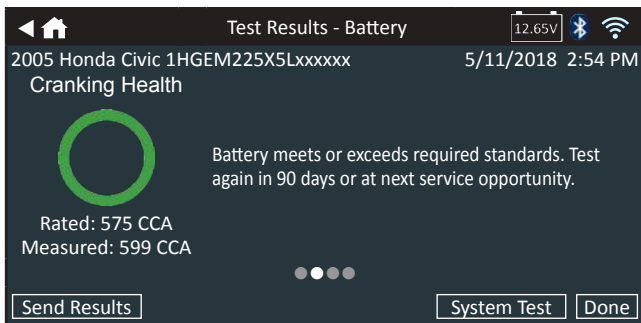


Icons are color-coded to indicate status.

<b>Green:</b>	All test parameters were completed and have passed.	<b>Red:</b>	The battery has failed the test.
<b>Yellow:</b>	Some test parameters may require further testing.	<b>White:</b>	Insufficient data to perform the test.


To print or send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or **System Test** to continue with the System Test.

 **NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

## System Test

1. Start the engine and let it idle.
2. Turn off all electrical accessories such as headlights and the interior ventilation blower fan and tap **Next**.
3. The analyzer tests the alternator output at idle.
4. When prompted, rev and hold the engine to between 2000 to 3000 RPM and tap **Next**. The analyzer tests the alternator output again.
5. When prompted Idle the engine.
6. Turn on the high beam headlights and interior ventilation blower motor and tap **Next**.
7. The analyzer tests the alternator output at idle.
8. When prompted, rev and hold the engine to between 2000 to 3000 RPM and tap **Next**.
9. The analyzer tests the alternator output again.
10. When prompted turn off all loads and Idle the engine.
11. Tap **Next** to display the test results.

## System Test Results-Summary

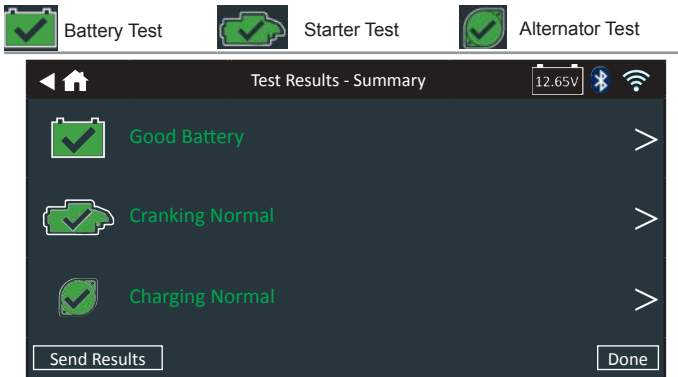

### Test Results - Summary

A Test Results - Summary screen is displayed following a System Test. Tap > to view detailed test results for each part of the test.



**NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or to return to the Main Menu.




## 3 – Out Of Vehicle Charge



Use the Out Of Vehicle Charge function to charge a battery not installed and connected in a vehicle.

At any time during the test tap to return to the previous screen or to return to the Main Menu.

1. Connect the charger clamps to the appropriate battery posts.
2. At the Main Menu tap **Out Of Vehicle Charge**. The Edit Battery Information screen is displayed.

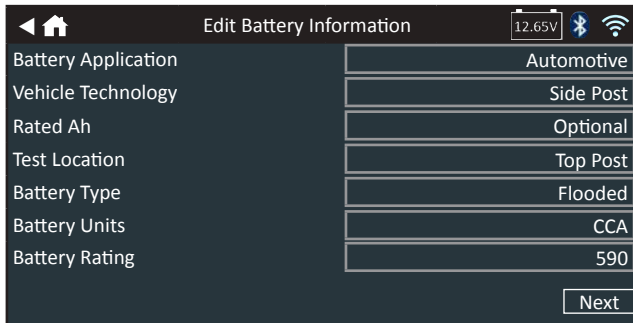

3. Tap the box across from each displayed parameter and select the correct information from the displayed list.



**NOTE:** Refer to Appendix A for recommended scanning procedures and VIN scanning help

4. Tap **Next** to begin the Battery Test or **Reset** to return to the default settings.

The charger performs a series of tests to determine the overall condition of the battery before applying a charge. Those steps include measuring the ambient battery temperature, Cranking Health, Reserve Capacity, Charge Acceptance, and applying a Load Test to the battery.

The test results are then displayed on the charger screen.

### Battery Test Results

See Chapter 2 - In Vehicle Charge for screen images.



**NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or to return to the Main Menu.

## 4 – Battery Diagnostics



Use the Battery Diagnostics function to perform a deep analysis of a battery without charging it.



**NOTE:** An In Vehicle Test test will always associate the in-vehicle battery with the VIN of the vehicle in which it is installed.

At any time during the test tap ◀ to return to the previous screen or 🏠 to return to the Main Menu.

### Battery Test

1. Connect the charger clamps to the appropriate battery posts.
2. At the Main Menu tap **In Vehicle Charge**. The Acquire VIN screen is displayed.
3. Use a connected bar code scanner to scan the VIN bar code, usually located on the driver's side door frame. A paired CVG can also be used. The VIN can also be entered manually.

For best results, use the barcode located on the driver's side door frame. The VIN is also displayed behind the windshield on the driver's side dashboard.



**NOTE:** Refer to Appendix A for recommended scanning procedures and VIN scanning help



Windshield



Drivers Door Frame

#### CVG Module:



**Manual Entry:** Use the on-screen keypad to manually type the 17-digit VIN and tap **Next**.

1	2	3	4	5	6	7	8	9	0
W	E	R	T	Y	U	P			
A	S	D	F	G	H	J	K	L	
Z	X	C	V	B	N	M			⊗
Back									Next

The displayed digit counter will count up the alphanumeric characters as they are entered on the keypad.

4. The Edit Battery Information screen displays vehicle and battery information based on the VIN.

Edit Battery Information			
VIN		Battery Application	Automotive
Vehicle Year	2010	Rated Ah	Optional
Vehicle Make	Pontiac	Test Location	Side Post
Vehicle Model	G6	Battery Type	Flooded
Vehicle Technology	Gasoline	Battery Units	CCA
Battery Installation	Single Battery	Battery Rating	590
Back Find Battery		Reset Next	

If the displayed information is correct, tap **Next** to begin the Battery Test or **Reset** to reset the parameters to the factory defaults.

5. Tap the box across from each displayed parameter and select the correct information from the displayed list.

See Appendix A at the back of this manual for parameter descriptions.



**NOTE:** See Appendix B for complete parameter descriptions.



**NOTE:** Tap **Find Battery** to search for the battery location based on the vehicle year, make, and model based on the VIN or vehicle year, make, and model selected.

The charger performs a series of tests to determine the overall condition of the battery before applying a charge. Those steps include measuring the ambient battery temperature, Cranking Health, Reserve Capacity, Charge Acceptance, and applying a Load Test to the battery.

The test results are then displayed on the charger screen.



**NOTE:** If the CVG was used to acquire the vehicle information, the Edit Battery Information screen is displayed (See Step 3). Tap **Next** to display the test results..

## Battery Test Results

See Chapter 2 - In Vehicle Charge for screen images.



**NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or to return to the Main Menu.


## New Battery Install

Register battery if available for the tested vehicle. Use the New Battery Install app to complete battery registration if a new battery is installed.

## System Test

1. Start the engine and let it idle.
2. Turn off all electrical accessories such as headlights and the interior ventilation blower fan and tap **Next**.
3. The analyzer tests the alternator output at idle.
4. When prompted, rev and hold the engine to between 2000 to 3000 RPM and tap **Next**. The analyzer tests the alternator output again.
5. When prompted Idle the engine.
6. Turn on the high beam headlights and interior ventilation blower motor and tap **Next**.
7. The analyzer tests the alternator output at idle.
8. When prompted, rev and hold the engine to between 2000 to 3000 RPM and tap **Next**.
9. The analyzer tests the alternator output again.
10. When prompted turn off all loads and Idle the engine.
11. Tap **Next** to display the test results.

## System Test Results-Summary

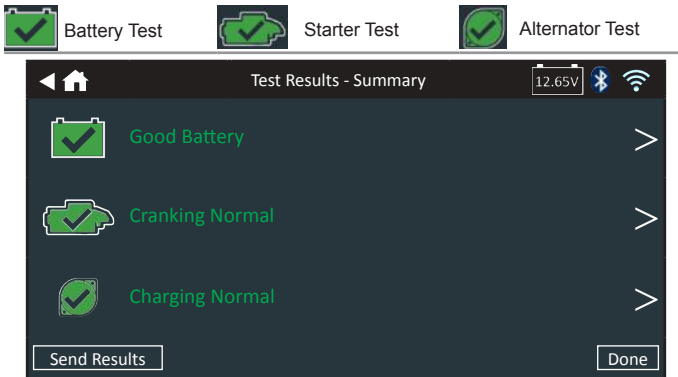

### Test Results - Summary

A Test Results - Summary screen is displayed following a System Test. Tap > to view detailed test results for each part of the test.



**NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or to return to the Main Menu.

## 5 – Jump Start



Jump Start

Use the Battery Diagnostics function to perform a deep analysis of a battery without charging it.

This charging mode makes high output current available to boost charge an in-vehicle battery as well as assist in starting the engine. Press **STOP** to abort at any time.



**IMPORTANT:** Before entering the Jump Start Mode, verify that all vehicle loads are off and the key is not in the ignition.

At any time during the test tap ◀ to return to the previous screen or 🏠 to return to the Main Menu.

1. Connect the charger clamps to the appropriate battery posts.
2. At the Main Menu tap **Jump Start**. The Jump Start screen is displayed.

3. Tap the box across from each displayed parameter and select the correct information from the displayed list.
4. Tap **Begin Jump Start** to begin the Jump Start process.

The charger performs a series of tests to determine the overall condition of the battery before applying a boost charge to the battery.



**IMPORTANT:** *Do not* crank the engine during the boost charging process.



**NOTE:** The maximum charge time is 10 minutes.





**NOTE:** The charger will not boost charge a battery that has tested unsafe.

5. Following a successful boost charge, the charger displays **CRANK ENGINE NOW**. The engine can now be cranked the engine for up to five seconds.
6. When the charger displays “**JUMP START COMPLETE**,” press **STOP** key. (The warning tone sounds every second until you press **STOP**.)


## Jump Start Summary

The results of the Jump Start session are displayed on the charger screen at the end of session.

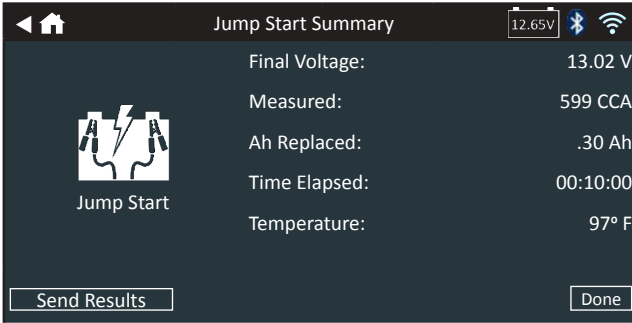


To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or  to return to the Main Menu.

## 6 – History

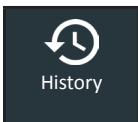

Use History to access the tool usage history, a vehicle history based on VIN, and user histories. The search function can also be used find test records for specific vehicles and technicians.

At the Main Menu, tap **History**. By default the Tool History screen is displayed.

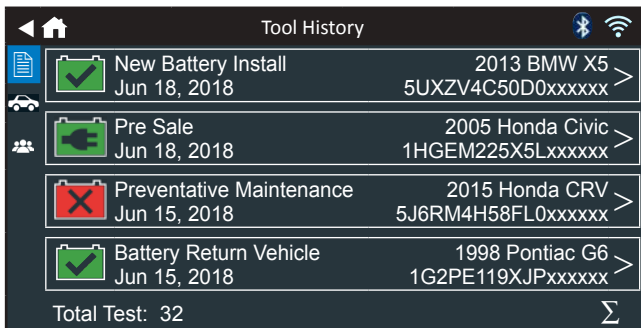

### Tool History



Use Tool History to view test total history as well as in vehicle and out of vehicle test totals. Individual test results are also displayed.

Tap > to view individual test details.

Tap Σ to view Total By Test Decision, Total By Test Type, and Total By Date And Location.

Tap **Done** to return to the Tool History screen.

### Totals By Test Decision

Good Battery	Charge & Retest
Good Recharge	Replace Battery
Aborted	Badcell Short Replace

### Totals By Charge Decision

Good Battery	Replace Battery
Good Recharge	Badcell Short Replace
Aborted	NO DECISION

### Totals By Test Type

Out Of Vehicle Charge	Jump Start
Battery Diagnostics	Battery Replacement
In Vehicle Charge	Manual Charge

### Totals By Date And Location

Last 7 Days	In Vehicle
Last 30 Days	Out Vehicle
Last 90 Days	

### Vehicle History



Vehicle History displays test totals conducted on specific vehicles based on the VIN. It is also possible to enter a VIN to search for test records for a specific vehicle by tapping the displayed buttons.

Tap on the records displayed on the right side of the screen to view the individual test results.



**NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

### Vehicle Select Option

Tap **Q** to select vehicle search option.

**Manual VIN Lookup:** Use the on-screen keypad to manually type the 17-digit VIN and tap **Next**.

**VIN Scan:** Use a connected scanner paired CVG to capture a VIN barcode, usually located on the driver’s side door frame.



**Search:** Search records by Vehicle Year, Make, and Model.



## User History



User History displays test totals for the user that is currently logged in to the analyzer.

Tap > to view individual test details.

Tap  $\Sigma$  to view Total By Test Decision, Total By Test Type, and Total By Date And Location.

### Totals By Test Decision

Good Battery	Charge & Retest
Good Recharge	Replace Battery
Aborted	Badcell Short Replace

### Totals By Charge Decision

Good Battery	Replace Battery
Good Recharge	Badcell Short Replace
Aborted	NO DECISION


### Totals By Test Type

Out Of Vehicle Charge	Jump Start
Battery Diagnostics	Battery Replacement
In Vehicle Charge	Manual Charge

### Totals By Date And Location

Last 7 Days	In Vehicle
Last 30 Days	Out Vehicle
Last 90 Days	

## 7 – Messages

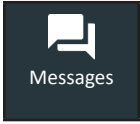

The Messages function displays alerts and notifications for upcoming tests and activities. This includes scheduled testing as well as tool software updates and maintenance opportunities.



Mark Read Or Unread



Delete Notification



Perform Message Action

Tap to return to the previous screen or to return to the Main Menu.

### Accessing Messages



A number is displayed next to the Messages icon when the analyzer has received any critical messages. The number does not include non-critical Notifications.




Unread Critical Messages



Read Critical Messages

1. Tap **Messages** on the Main Menu screen.

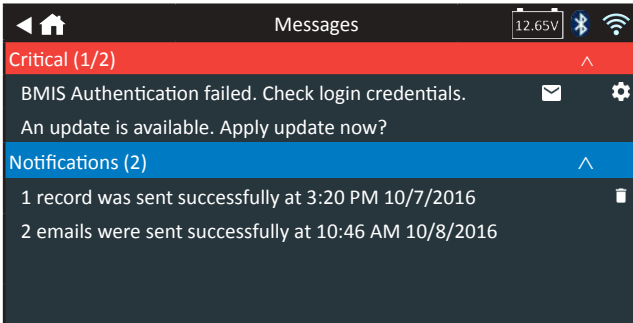


2. Tap to read a message.  
Tap to perform the message action item.  
Tap to delete a message.
3. Tap to collapse a list of messages or to expand the list.

### Message Types

**Critical:** An important action cannot be performed and may require user action.

**Notifications:** Indicates an action has been performed or data has been sent.

## 8 – Manual Charge

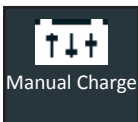

Use Manual Charge to charge a battery using user-selectable parameters including voltage, current, or time.

At any time during the test tap to return to the previous screen or to return to the Main Menu.

1. Connect the Diagnostic Device test clamps to the battery.
2. At the Main Menu tap **Manual Charge**. The Edit Battery Information screen is displayed.
3. Enter the battery information and charging parameters.

Edit Battery Information		12.65V		
Battery Application	Automotive	Charge Limit	Voltage	
Rated Ah	Optional	Charge Value(V)	15.5	
Battery Type	Pontiac	Time Type	Timed	
Battery Units	CCA	Time Value	60	
Battery Rating	590			
Temperature Max(F)	135			
		Reset	Continue	



**NOTE:** See Appendix B for complete parameter descriptions.

If the displayed information is correct, tap **Continue** to begin the Battery Test. Tap on the corresponding box to edit the parameter information.


The charger goes through a series of steps to determine the overall condition of the battery before applying a charge. Those steps include measuring ambient temperature, Cranking Health, Reserve Capacity, Charge Acceptance, and applying a Load Test on the battery.

Manual Charge Results		12.65V		
Final Voltage:		13.02 V		
Measured:		599 CCA		
Ah Replaced:		.30 Ah		
Time Elapsed:		00:10:00		
Temperature:		97° F		
Manual Charge		Send Results	Done	

The test results are displayed on the charger screen.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or to return to the Main Menu.

# 9 – Settings

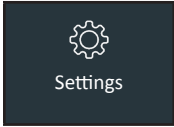

Use the Setup options to setup and adjust WiFi, printer setup and selection, email settings, user information, default language, display settings, sound settings, BMIS login information, shop information, user management, connected accessories, and device information.

Tap ◀ to return to the previous screen or 🏠 to return to the Main Menu.

## WiFi



Use WiFi to view, add, and delete wireless networks.

Tap on the WiFi icon to display a list of detected and configured WiFi networks.



### Adding A Network

1. Tap + to add a WiFi network.  
A list of detected wireless networks is displayed with ● next to the selected network.
2. Tap > to access the network Security and IP Settings.

Security	None WEP WPA/WPA2 PSK
IP Address	DHCP Static

3. Tap → to configure the selected network.
4. Once the network has been successfully configured, tap → to return to the list of available configured networks. A ● indicates the selected network.

### Deleting A Network

1. Tap a displayed network.
2. Tap 🗑️ to delete the network and tap Yes to confirm.

## Printer Settings




The Printer Setup function detects and displays a list of connected and available WiFi and Bluetooth printers.



**NOTE:** WiFi network communication must be successfully established before a printer or printers can be detected and setup.

Tap on the Printer icon to display a list of available printers on the configured WiFi and Bluetooth networks.

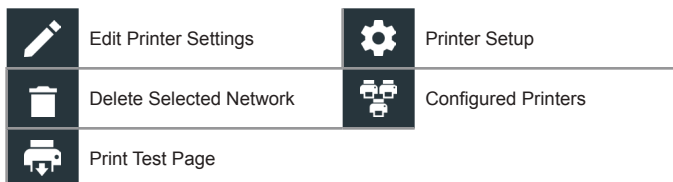

### Adding A WiFi Printer (Admin Only)

1. Tap to access the Printer Setup functions.
2. Tap to add a WiFi printer.  
Make sure the printer is on and connected to the same wireless network as the analyzer.
3. Tap to add the printer to the list of eligible printers.
4. Tap to connect to the selected printer. A message is displayed when the configuration is successful.
5. Tap to return to the printer list.


### Adding A Bluetooth Printer (Admin Only)

1. Tap the sign to add a Bluetooth printer.
2. Make sure the printer(s) is on.
3. Tap to add the printer to the list of eligible printers.
4. Tap to connect to the selected printer.
5. When prompted, enter the device PIN and tap . A message is displayed when the pairing is successful.
6. Tap to return to the printer list.

### Deleting A Printer (Admin Only)

1. Tap to access the Printer Setup functions.
2. Tap a displayed printer.
3. Tap to delete the printer and tap Yes to confirm.

## Email



Displays all entered email addresses. Addresses can be added, edited, and deleted (Admin Only). Entered email accounts are added to the email address book. Frequently used email addresses can be selected from the displayed address list rather than being re-typed each time.



### Add Address (Admin Only)

1. Tap to add an email address.
2. Use the displayed keypad to enter the contact name and email address.
3. Tap Add to add the address to the email list or Cancel to exit and return to the email list.

### Edit Address (Admin Only)

1. Select a displayed email address by tapping it.
2. Tap to edit the address.
3. Use the displayed keypad to edit the contact name and email address.
4. Tap Add to add the address to the email list or Cancel to exit and return to the email list.

### Deleting An Address (Admin Only)

1. Select the email address by tapping it.
2. Tap to delete the address and tap Yes to confirm or Cancel to exit and return to the email list.

### Server Settings

Enter and edit the email settings for sending outgoing email.

1. Tap to access the email sever settings.
2. Tap to enter or modify existing server settings including Host, Port, Login, Password, SMTP Authorization, Enable TLS, and From Email Address information.
3. Tap to clear all server settings.
4. Tap to return to the email Address Book.

## User Settings (Admin Only)



Modify Usernames and Passwords..



Edit Users



User Settings







Delete Users



User Management

## User Management (Admin Only)

1. Tap  to access User Management functions.
1. Tap  to display the current logged in Admin user.
2. Select a displayed user by tapping it.
3. Tap  to edit the Username, Password, and User Type (Standard or Admin).
4. Tap **X** when complete to return to the User Management screen.
5. Tap  to delete the selected user and Yes to confirm.

## Language Settings



Use the Language & Input function to select the default system language used by the tool. User defaults also include Test Results, Email, and Print languages.

### System Language

Select the charger default standard language.

### Test Result Language

Select the default language for the charger to use for all displayed tests and results.

### Email Language

Select the default standard language for the analyzer to use for all tests and results sent via email.

### Print Language

Select the default standard language for the analyzer to use for all tests and results printed using a networked printer.

## Display Settings



Adjust the charger display including the Brightness, Sleep Time, and Dim Time. Auto Brightness can also be turned on and off.

### Brightness

Adjust the display Brightness by tapping and holding the slider, then moving it right or left to make the screen brighter or darker.

### Auto Brightness

Enable and disable Auto Brightness by taping on the check box.

### Sleep Time

Adjust the amount of elapsed time before the charger goes into a power saving (Sleep) mode. Default = 2 minutes.

### Dim Time

Adjust the amount of elapsed time before the charger goes into a power saving (Dim) mode. Default = 1 minute.

## BMIS Login (Admin Only)



Enter and edit BMIS Login and Password information. Log into a BMIS account.

Login

Password



## Shop Information (Admin Only)



Access default Shop Information including Store Name, address, and phone number. Also access battery test defaults including rating, temperature units, and decimal separator. Use also to adjust the tester date and time settings.


	Settings Home		User Settings
	Test Settings		User Management
	Date/Time Settings		Create MDCA Log File

### Shop Information

Use the onscreen keypad to enter the store name, address, and phone number.

Store Name	<input type="text" value="Midtronics"/>
Street Address	<input type="text" value="7000 Monroe"/>
Street Address 2	<input type="text" value="° F"/>
City	<input type="text" value="Willowbrook"/>
State	<input type="text" value="IL"/>
Zipcode	<input type="text" value="60527"/>
Phone #	<input type="text" value="1-630-323-2800"/>

### Test Settings

1. Tap  to access the test setting defaults. Tap the boxes or icons to change the values.

Battery Rating	<input type="text" value="CCA"/>
Temperature Units	<input type="text" value="° F"/>
Decimal Separator	<input type="text" value="00.00"/>
Create MDCA Log File	

#### Battery Rating

Default battery rating units used when testing batteries.

#### Temperature Units


Default temperature units used when measuring battery temperature.

#### Decimal Separator

Default number display using commas or periods separators.



#### Create MDCA Log File

The MDCA function is used by Midtronics technical support.

2. Tap  to return to the Shop Information screen.

### Date/Time Settings

1. Tap  to access the Date/Time setting defaults.

Select Time Format	<input type="text" value="12 Hour"/>
Select Date Format	<input type="text" value="10/18/2016"/>
Select Time Zone	<input type="text" value="EST"/>
Set Date	
Set Time	

#### Select Time Format

12 or 24 Hour Format

#### Select Date Format

Month/Day/Year, Day/Month/Year, or Year/Day/Month

#### Select Time Zone

Time zone in which the analyzer will be operated.


#### Set Date

Tap ▲ or ▼ to enter the month, day, and year. Tap Set to save the date or Cancel to exit without saving.

May	10	2017
<b>Jun</b>	<b>11</b>	<b>2018</b>
Jul	12	2019
DONE		

**Set Time**


Tap ▲ or ▼ to enter the hours, minutes, and AM/PM. Tap Set to save the date or Cancel to exit without saving.

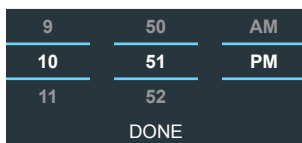



2. Tap  to return to the Shop Information screen.

**Device List**

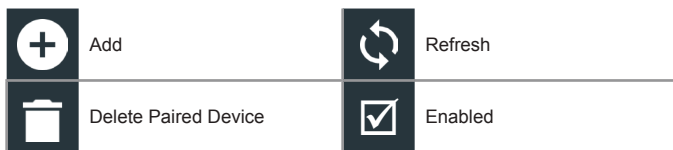Displays connected and linked accessory devices. Additional devices and CVG-2 modules can also be detected and linked to the analyzer.


**Add CVG Device**

1. Tap  to add a CVG.
2. Plug the CVG into the OBDII port of any vehicle.
3. Turn the vehicle ignition on, but do not start the vehicle.
4. A list of detected CVGs is displayed. Tap > next to the desired CVG to select it. If the desired CVG is not displayed, tap  to refresh the list.



**NOTE:** A passkey number is automatically generated once the Bluetooth pairing has been established.

A confirmation message is displayed when the CVG has been successfully linked.

5. Tap  to return to the Device List screen.

## Version Information



Use Version Information to display WiFi connection data the DSS Controller, Diagnostic Device, and CVG-2 Device software version information.



Factory Reset



Check For Updates



Legal Information

Serial Number	0987654321
WiFi MAC Address	e0:e5:cf:b3:9b:25
Configuration Version	192-411340-A00-0039
Data Version	192-481341-A01-005
Controller Version	192-001339-A00-0039
Diagnostic Device Version	192-211379A-25
CVG-2 Device Version	No Device Configured
OS Version	dca8000-eng 4.4.2 DEVR10_06

### Factory Preset

Use this function to return the tool to the original as built configuration including all history and test settings.



**IMPORTANT:** All previous modifications to the original settings will be overwritten.

### Legal Information

Displays software attribution information via the Midtronics website. The analyzer must be connected to the Internet.

### Check for Updates

Use this function to check via the internet connection for any updates to the tester software.

## 10 – Reflash



Use Reflash to test and maintain battery voltage in a vehicle at 13.5 volts to allow for uninterrupted reprogramming of vehicle's computer, retain vehicle system settings, or simply to maintain battery voltage.

At any time during the test tap ◀ to return to the previous screen or 🏠 to return to the Main Menu.

1. Connect the Diagnostic Device test clamps to the battery.
2. At the Main Menu tap **Reflash**. The Reflash screen is displayed.



**NOTE:** See Appendix B for complete parameter descriptions.

3. Enter the battery information and reflashing parameters.

If the displayed information is correct, tap **Start Reflash** to begin.

The charger goes through a series of steps to determine the overall condition of the battery before applying reflash power. Those steps include measuring ambient temperature, Cranking Health, Reserve Capacity, Charge Acceptance, and applying a Load Test on the battery.

The test results are displayed on the charger screen.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or 🏠 to return to the Main Menu.

# 11 – After New Battery Install



Use After New Battery Install to test a newly installed battery in a vehicle. Where applicable, the process will also include registering the battery in the vehicle and a Reset Electronics checklist.

At any time during the test tap < to return to the previous screen or 🏠 to return to the Main Menu.

## Battery Test

1. Connect the charger clamps to the appropriate battery posts.
2. At the Main Menu tap **In Vehicle Charge**. The Acquire VIN screen is displayed.
3. Use a connected bar code scanner to scan the VIN bar code, usually located on the driver's side door frame. A paired CVG can also be used. The VIN can also be entered manually.

For best results, use the barcode located on the driver's side door frame. The VIN is also displayed behind the windshield on the driver's side dashboard.



**NOTE:** Refer to Appendix A for recommended scanning procedures and VIN scanning help



Windshield



Drivers Door Frame

### CVG Module:




**Manual Entry:** Use the on-screen keypad to manually type the 17-digit VIN and tap **Next**.


1	2	3	4	5	6	7	8	9	0
W	E	R	T	Y	U	P			
A	S	D	F	G	H	J	K	L	
Z	X	C	V	B	N	M			⊗
Back									Next


The displayed digit counter will count up the alphanumeric characters as they are entered on the keypad.

- The Edit Battery Information screen displays vehicle and battery information based on VIN.

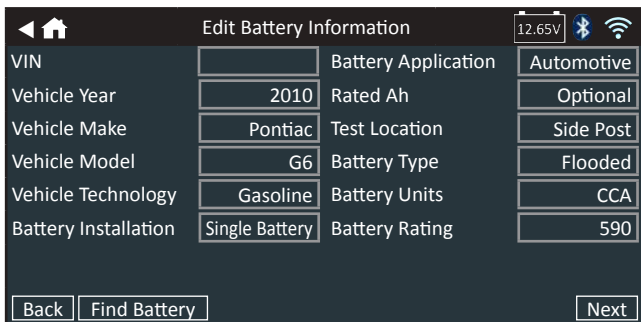


- Tap the box across from each displayed parameter and alter the information from the displayed list. If the information is correct, tap **Next** to begin the Battery Test.

 **NOTE:** See Appendix B for complete parameter descriptions.

 **NOTE:** Tap **Find Battery** to search for the battery location based on the vehicle year, make, and model based on the VIN or vehicle year, make, and model selected.

The charger performs a series of tests to determine the overall condition of the battery before applying a charge. Those steps include measuring the ambient battery temperature, Cranking Health, Reserve Capacity, Charge Acceptance, and applying a Load Test to the battery.

The test results are then displayed on the charger screen.

 **NOTE:** If the CVG was used to acquire the vehicle information, the Edit Battery Information screen is displayed (See Step 3). Tap **Next** to display the test results..

### Battery Test Results

See Chapter 2: In Vehicle Test, Battery Test Results for screen images and descriptions.

### Reset Electronics

Use this function as a checklist for resetting vehicle electronics following a new battery installation. Options displayed are determined by the VIN of the vehicle tested.


Option
All models:
Electric windows and sunroof:
Additional systems:

### System Test Results-Summary

See Chapter 2: In Vehicle Test, System Test for screen images and descriptions.



**NOTE:** Refer to Appendix C: Test Result Decision Tables for a complete explanation of possible test results.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or  to return to the Main Menu.

## Appendix A: Recommended Scanning Procedure

The Conductance Profiling™ technology determines battery cranking and Reserve Capacity testing. This additional process, can take up to 60 seconds to complete.

### VIN Scanning

For scanning VINs, the DCA-8000 Diagnostic Charger uses a handheld scanner connected to the back of charger using a DB-9 style connector. Once successfully scanned, the VIN is cross referenced with the original equipment manufacturer's battery specifications stored in the charger's database and displayed on the screen.

### Scanning Tips



- **Hold Steady:** Hold the device steady when scanning the VIN barcode. This allows the user to clearly see the barcode and allows the camera to focus on it.
- **Scan Entire Barcode:** Position the scanner in and out until it covers the entire barcode.
- **Clean Barcode/Window:** Surface dirt can interfere with the scanning process. If necessary wipe the VIN barcode with a cloth or your finger remove any surface dirt.
- **Lighting/Glare:** The built-in flashlight will automatically turn on in low light situations. If the flashlight, or sunlight, is shining directly onto the VIN barcode, try pivoting the camera up or down slightly to reduce any glare.











## Appendix B: Battery Information Definitions

<b>Battery Application</b>	Automotive, Marine, Powersport, Group 31, Commercial 4D/8D, Lawn and Garden		
<b>Battery Installation</b>	Single Battery or Dual Batteries		
<b>Battery Post</b>	Top Post, Side Post, Dual Post		
<b>Battery Rating</b>	Enter the Battery Rating Units value		
<b>Battery Type</b>	Flooded, AGM (Absorbed Gas Mat), AGM Spiral, Gel, Enhanced Flooded		
<b>Battery Units</b>	CCA	Cold Cranking Amps: Battery current at 0 °F (-17.8 °C).	100 to 3000
	CA	Cranking Amps: Battery current at 32°F (0 °C).	100 to 3000
	JIS	Japanese Industrial Standard: Usually printed on battery label.	26A17 to 245H52
	DIN(A)	Deutsche Industrie-Norm	100 to 1000
	SAE(A)	European labeling of CCA	100 to 3000
	IEC(A)	International Electrotechnical Commission	100 to 1000
	EN(A)	Europa-Norm	100 to 1700
	EN2(A)	Europa-Norm	100 to 1700
<b>Charge Limit</b>	Limit charge by Voltage or Amperage		
<b>Charge Value</b>	Maximum amount of applied charge (Voltage or Amperage)		
<b>Rated Ah</b>	Rating of battery being charged in Amp-hours (optional)		
<b>Temperature (Max)</b>	Maximum temperature of battery during a manual charge		
<b>Test Location</b>	Top Post, Side Post, Remote Post		
<b>Time Type</b>	Timed (10 to 120 minutes) or Continuous		
<b>Time Value (Timed Charge Only)</b>	Length (In Minutes) of Manual Timed Charge		
<b>VIN</b>	A unique code, including a serial number, used by the automotive industry to identify individual motor vehicles, motorcycles, scooters and mopeds, as defined by ISO 3833.		
<b>Vehicle Make</b>	Vehicle manufacturer		
<b>Vehicle Model</b>	Vehicle name or number		
<b>Vehicle Technology</b>	Hybrid, Gasoline, Electric, Start-Stop, Hybrid Start-Stop, Diesel		
<b>Vehicle Year</b>	Model year that a vehicle was manufactured.		







## Appendix C: Test Results Decision Tables

### Battery Test Results





Decision	Cranking Health	Reserve Capacity	SOH Message	RC Message
 Good Battery	Good	Good	The battery shows good cranking performance. Test the battery again at next service opportunity.	The battery has good reserve capacity. The battery is able to provide power for the electronics systems in the vehicle.
 Good Recharge	Good Recharge		The battery shows good cranking performance but low charge. Fully charge the battery for optimal performance and life. Check the starting and charging systems for causes of low charge.	
 Charge & Retest	Charge and Retest		Charge the battery and retest to determine condition.	
 Replace Battery	Good	Warning	The battery shows good cranking performance but low reserve capacity performance. Low reserve capacity will compromise the battery's ability to provide power to the vehicle and hold a charge over time.	The reserve capacity of the battery is low. Low reserve capacity of the battery could impact the ability of the battery to provide power for the electronics systems in the vehicle. The battery should be replaced.
	Good Recharge		The battery shows good cranking performance but low charge and low reserve capacity performance. Low reserve capacity will compromise the battery's ability to provide power to the vehicle and hold a charge over time. Check the starting and charging systems for causes of low charge.	
	Charge and Retest		The battery shows low charge and low reserve capacity performance. Low reserve capacity will compromise the battery's ability to provide power to the vehicle and hold a charge over time.	
	Warning			
	Warning	Good	The battery shows low cranking performance. Replace the battery to prevent a no-start situation in your vehicle.	The battery has good reserve capacity. The battery is able to provide power for the electronics systems in the vehicle.

Decision	Cranking Health	Reserve Capacity	SOH Message	RC Message
 Good Battery	Good	No Test	The battery shows good cranking performance. Test the battery again at next service opportunity.	System conditions have prevented a test of the battery reserve capacity in this vehicle. Before attempting any retest, ensure that all vehicle accessory loads are off, the key is not in the ignition, and the doors are closed.
 Good Recharge	Good Recharge		The battery shows good cranking performance but low charge. Fully charge the battery for optimal performance and life. Check the starting and charging systems for causes of low charge.	
 Charge & Retest	Charge & Retest		Charge the battery and retest to determine condition.	
 Replace Battery	Warning		The battery shows low cranking performance. Replace the battery to prevent a no-start situation in your vehicle.	
No Test	No Test	No Test	Conditions have prevented a test of the battery reserve capacity. Ensure that there are no loads on the battery before attempting any retest.	






### Starter Test Results

Decision	Action
 Cranking Normal	The starter voltage is normal and the battery is fully charged.
 Low Voltage	The starter voltage is low and the battery is fully charged.
 Charge Battery	The starter voltage is low and the battery is discharged. Fully charge the battery and repeat the starter system test.
 Replace Battery	If the battery test result was REPLACE, the battery must be replaced before testing the starter.
 Low Current	The starter voltage is high but the cranking amps are low.
 No Start	The engine didn't start and the test was aborted or the vehicle's starting profile was not detected and the Starter Test was skipped.

## Alternator Test Results

Decision	Action
 CHARGING NORMAL	The output from the alternator is normal.
 NO OUTPUT	<p>No output detected. Check belts to ensure alternator is rotating when engine is running.</p> <ul style="list-style-type: none"> <li>√ Check all alternator connections including to the battery. Clean or replace if necessary and retest.</li> <li>√ If the belts and connections are in good working condition, replace alternator or external voltage regulator.</li> </ul>
 LOW OUTPUT	<p>Alternator not providing enough current to power electrical loads and charge the battery.</p> <ul style="list-style-type: none"> <li>√ Check belts to ensure the alternator is rotating with the engine running.</li> <li>√ Check alternator connections to and from the battery. If loose or heavily corroded, clean or replace the cable and retest.</li> </ul>
 HIGH OUTPUT	<p>Alternator voltage to the battery exceeds normal limits of a functioning regulator.</p> <ul style="list-style-type: none"> <li>√ Check for loose and normal ground connections. If no connection problems are found, replace the regulator.</li> </ul> <p>The normal high limit of a typical automotive regulator is 14.5 volts +/-0.5. Refer to the manufacturer specifications for the correct limit, which may vary by vehicle type.</p>

## Diode Test Results

Decision	Action
 NORMAL RIPPLE	The output from the alternator is normal.
 EXCESSIVE RIPPLE	<p>One or more diodes in the alternator are not functioning or there is stator damage, which is shown by an excessive amount of AC ripple current supplied to the battery.</p> <ul style="list-style-type: none"> <li>√ Make sure the alternator mounting is sturdy and that the belts are in good shape and functioning properly. If the mounting and belts are good, replace the alternator.</li> </ul>
 OPEN PHASE	Replace the alternator.
 OPEN DIODE	
 SHORTED DIODE	







## PATENTS

This product is made by Midtronics, Inc., and is protected by one or more U.S. and foreign patents. For specific patent information, contact Midtronics, Inc. at +1 630 323-2800.

## LIMITED WARRANTY

Midtronics products are warranted to be free of defects in materials and workmanship for a period of one (1) year from date of purchase. Midtronics will, at our option, repair or replace the unit with a re-manufactured unit. This limited warranty applies only to Midtronics products, and does not cover any other equipment, static damage, water damage, overvoltage damage, dropping the unit, or damage resulting from extraneous causes including owner misuse. Midtronics is not liable for any incidental or consequential damages for breach of this warranty. The warranty is void if owner attempts to disassemble the unit or to modify the cable assembly.

## SERVICE

To obtain service, contact Midtronics at 866-592-8052. Have your model and serial numbers ready. This first step is critical as we will trouble-shoot the problem(s) over the phone, and many problems are resolved during this step. If the problem cannot be resolved, then the Customer Service Agent will issue you a Return Material Authorization (RMA). This number becomes your tracking number. The final step is to return the unit to Midtronics freight prepaid (you pay), to the attention of the RMA number obtained.

### In USA:

Midtronics, Inc.  
Attn: RMA # xxxxx (this is the RMA number that you must obtain from Midtronics)  
7000 Monroe St.  
Willowbrook, IL 60527

### In Canada:

Midtronics c/o FTN (FTN is Fed-ex Trade Networks –this is NOT a Midtronics facility)  
Attn: RMA # xxxxx (this is the RMA number that you must obtain from Midtronics)  
7075 Ordan Drive  
Mississauga, ON L5T1K6

Midtronics will service and return the unit using the same type of service as received. If Midtronics determines that the failure was caused by misuse, alteration, accident, or abnormal condition of operation or handling, purchaser will be billed for the repaired product and it will be returned freight prepaid with shipping & handling charges added to the invoice. Midtronics products beyond the warranty period are subject to the repair charges in place at that time. Optional re-manufacturing service is available to return our products to like-new condition. Out-of-warranty repairs carry a 3-month warranty. Re-manufactured units purchased from Midtronics are covered



[www.midtronics.com](http://www.midtronics.com)

### Corporate Headquarters

Willowbrook, IL USA  
Phone: 1.630.323.2800  
Canadian Inquiries  
Toll Free: +1 866 592 8052

### Asia/Pacific (excluding China)

Contact Corporate Headquarters  
Phone: +1.630.323.2800

### Midtronics b.v.

European Headquarters  
Houten, The Netherlands  
Serving Europe, Africa, the Middle  
East, and The Netherlands  
Phone: +31 306 868 150

### Midtronics China

China Operations  
Shenzhen, China  
Phone: +86 755 2374 1010

### Midtronics India

Navi Mumbai, India  
Phone: +91 22 2756 4103/1513